 



Basic Operations of the Sony DFC-F707 Digital Still Camera

Complete manual located at
[P:\Administration\Procedures\Equipment Manuals\Sony DSCF707
digital camera.pdf](P:\Administration\Procedures\Equipment Manuals\Sony DSCF707 digital camera.pdf)

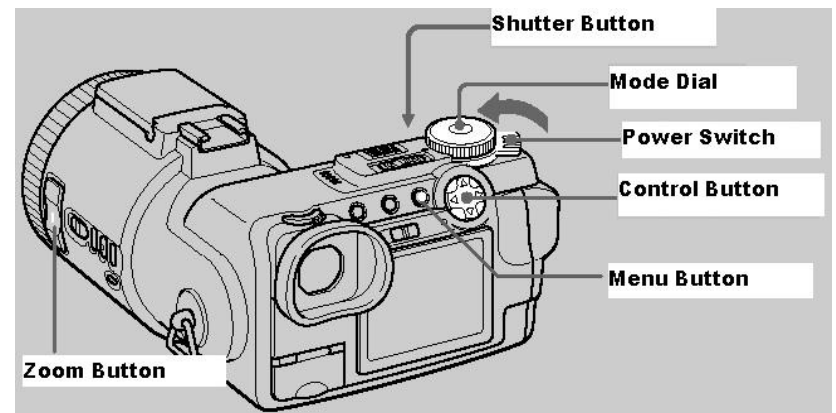

 Turning the Camera On



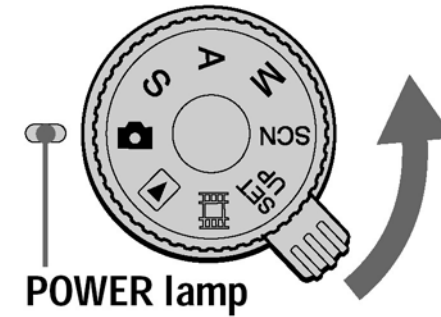Slide the *Power Switch* in the direction of the arrow to turn on the power.



Operation of the Mode Dial

The *Mode Dial* switches the function that is used for recording, playback or editing.

The most commonly used modes are:


	To record still images
	To play back or edit images
SET UP	To set the SET UP items

Operation of the Control Button

Select



 Set

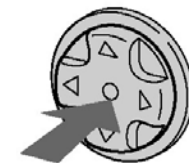


Changing Camera Options

When the *Menu* is not displayed on the LCD Screen, the *Control Button* is used to perform the following operations:

Up	Record with flash
Down	Record with self-timer
Left	Check the last recorded image
Right	Record close subjects

When the *Menu* or *SET UP Menu* is displayed, the arrow keys on the *Control Button* are used to move between the possible options, and pressing the center of the *Control Button* sets options.

 Menu Button

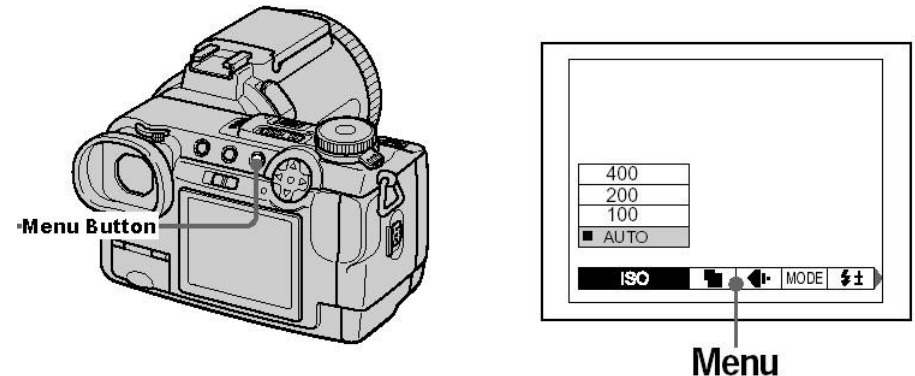


Press the *MENU* button to turn on/off the operation buttons (menu) on the LCD screen.

Note on photo resolution and quality:


In most cases, a setting of *1280 x 960* for resolution and a photo quality of *Standard* will suffice (i.e. photos that will be emailed, used on the web, etc. If these setting are not used, it may be necessary to manually edit the photos before emailing them/posting them on the web.). If high quality/resolution images are needed, resolution should be changed to *2560 x 1920* and photo quality should be changed to *Fine* (i.e. detail photos, photos that will be used in printed publications).

Determining and Setting Image Size


Resolution and Quality Setting	Used for:	Capacity of 128mb card:
1280 x 960, Standard Quality	email, web	Approximately 392
2560 x 1920, Fine Quality	detailed photos, printed publications	Approximately 88

1. Set the *Mode Dial* to: 
2. Press the *MENU Button*.
3. Press the right/left arrows of the *Control Button* to change the image size. Using the up/down arrows of the *Control Button*, select the appropriate resolution.
4. Press the right arrow of the *Control Button* and select the appropriate photo quality.
5. When finished, press the *MENU Button* to exit the screen.

 
Recording Still Images

1. Set the *Mode Dial* to: 
2. Press and hold the *Shutter Button* halfway down.
3. After the camera beeps, press the *Shutter Button* completely down.

Using the Self-Timer


1. Set the *Mode Dial* to: 
2. Press the down arrow of the *Control Button*.
3. Press the *Shutter Button*. The picture will take about 10 seconds after the *Shutter Button* is pressed. A beep will sound until the picture is taken.

Using Zoom Function

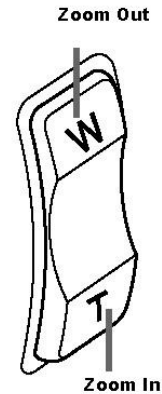


The *Zoom Button* is located on the side of the lens, and is marked with a *W* (for wide angle, zoom out) and *T* (for telephoto, zoom in).

 
Deleting Photos

1. Set the *Mode Dial* to: 
2. Select the picture you want to delete by using the left/right arrows of the *Control Button*.
3. Press MENU
4. Select [DELETE] with the right arrows of the *Control Button*, press the center of the *Control Button*.
5. Select [OK] with the up/down arrows of the *Control Button*, press the center of the *Control Button*.


Viewing Photos

1. Set the *Mode Dial* to: 
2. Use the left/right arrows of the *Control Button* to scroll through the photos on the memory card.


Downloading Photos

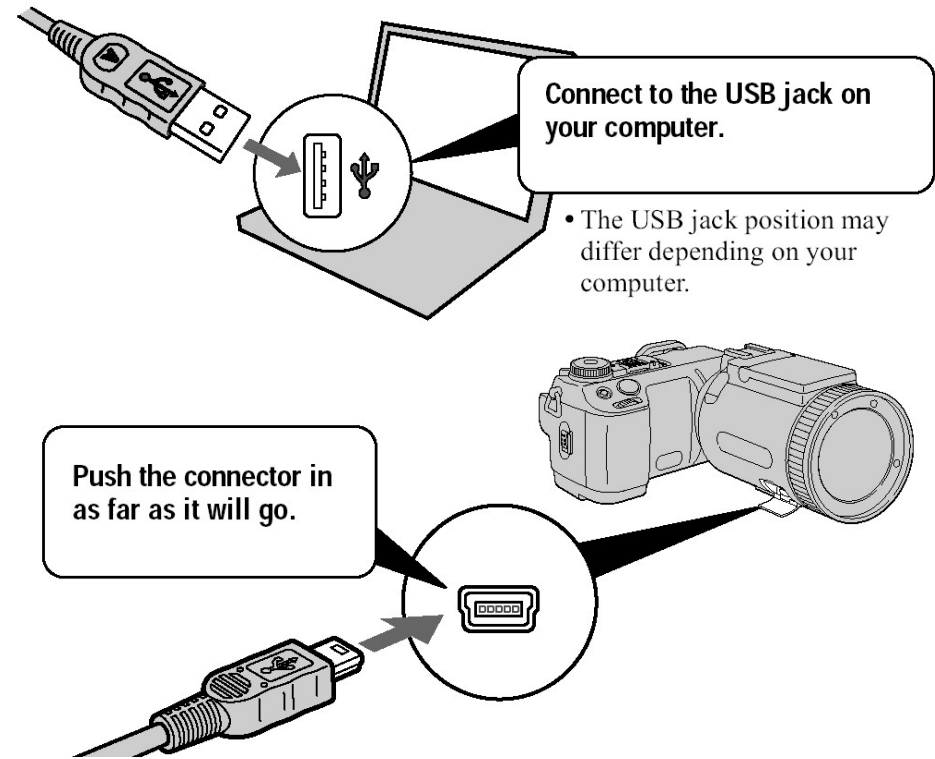

 1. Plug the USB Cable into the camera and your computer.

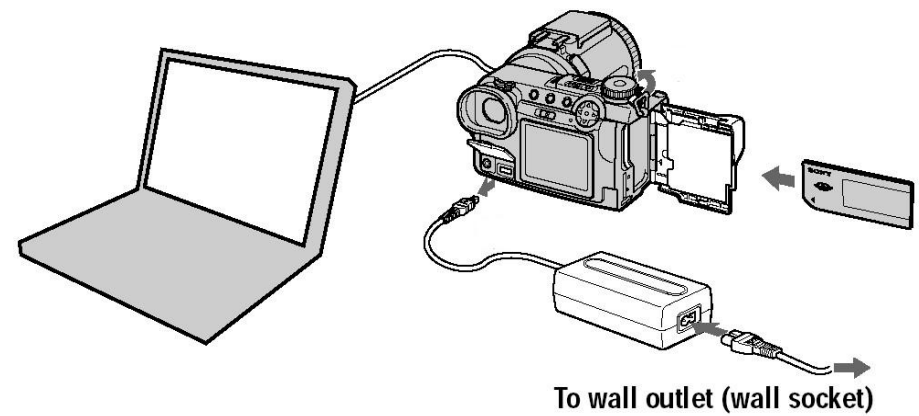

 2. Plug the DC adapter into the camera and into a wall outlet.
3. Slide the *Power Switch* to turn on the camera.
4. Download the pictures
 - a. If you are using the Windows XP, follow the onscreen prompts to download the pictures.
 - b. If you are not using Windows XP, additional drivers will need to be installed. Get assistance from the IT department or refer to the Sony Instruction Manual to install the drivers which are on disk in the large camera bag.

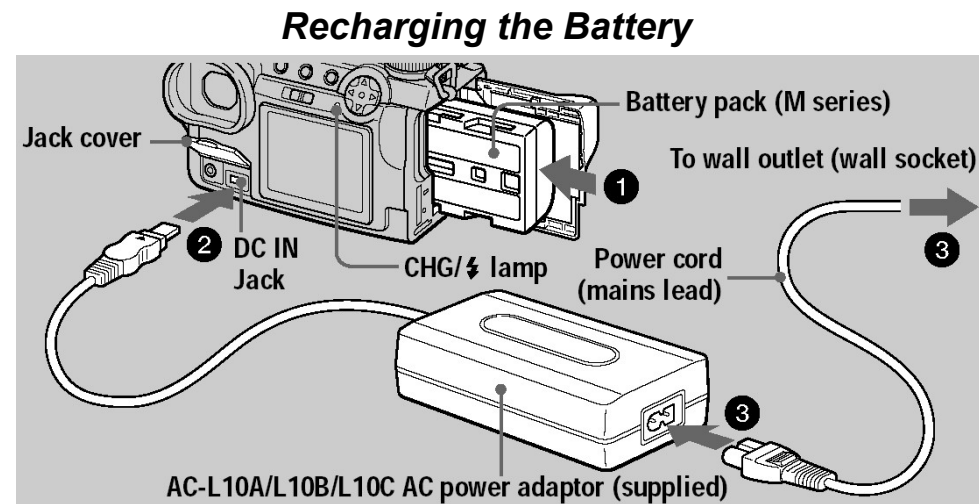

1. Insert the battery pack.
2. Connect the DC connecting cable to the DC in jack on the camera, as shown.
3. Connect the power cord to the AC Power adaptor and then into a wall outlet.

NOTE: There is a **spare battery** in the hidden compartment of the camera case.